



**ADVISOR<sup>®</sup>**

**CD 7203  
CD95/15003**

**User Manual**

**Software from version: V6.0**

---

COPYRIGHT

© SLC BV 1996. All rights reserved. No part of this publication may be reproduced, transmitted, stored in a retrieval system, or transmitted in any form, or by any means - electronic, photocopying, recording, or otherwise - without the prior written permission of SLC BV.

DISCLAIMER

SLC BV makes no representations or warranties with respect to the contents hereof and specifically disclaim any implied warranties of merchantability or fitness for any particular purpose. Further SLC BV reserve the right to revise this publication and to make changes from time to time in the contents hereof without the obligation of SLC BV to notify any person of any such revision.

# CONTENTS

<b>INTRODUCTION .....</b>	<b>4</b>
<b>USING THE KEYPAD.....</b>	<b>5</b>
The CD3008 keypad.....	5
The display .....	6
The LEDs .....	6
<b>USING A SINGLE ALARM SYSTEM .....</b>	<b>7</b>
Arming a system.....	7
Arming a system with open zones.....	8
Disarming a system .....	9
Disarming a system after an alarm .....	10
<b>USING A SPLIT SYSTEM .....</b>	<b>11</b>
Arming a split system .....	12
Arming a split system with open zones .....	13
Disarming a split system .....	15
Disarming a split system after an alarm .....	16
<b>UPLOADING AND DOWNLOADING IN THE CD72 AND THE CD95.....</b>	<b>18</b>
<b>OVERVIEW OF THE OPTIONS AVAILABLE.....</b>	<b>19</b>
Option list for the CD72/95/150 .....	19

---

 
# INTRODUCTION

Thank you for choosing an ARITECH security system. When properly maintained, the system will provide years of reliable operation.

This manual explains how to use the ARITECH CD72 and CD95 series for every day use. There is a more detailed manual available for managers which explains how to carry out a wider range of operations. These instructions apply to both the CD95 and CD150.

The CD95 is a burglar alarm system which can detect an (attempted) break-in using connected detectors, magnetic contacts, etc., generating an alarm. The CD72 can be divided into two independent systems, and the CD95 into eight independent systems.

The manual uses symbols to show when you must enter information into the keypad, and when the system emits a beep. Examples of these symbols are shown below:



You need to enter information into the keypad. What you have to enter is on the right of the symbol. In this example you should enter your code and then press the Accept key (✓).



The buzzer on a key switch or keypad emits a long beep. Short beeps can also be emitted - this is indicated with the text '**Beep Beep**'.

Your system has been programmed with one or two entrance times and one exit time. These are pre-set amounts of time that let you enter and leave the premises through specific routes without activating an alarm. Be sure you know which routes you can use to leave and enter the premises.

Entrance time: \_\_\_\_\_ seconds


Exit time: \_\_\_\_\_ seconds

Second entrance time: \_\_\_\_\_ seconds

# USING THE KEYPAD

 This chapter describes the alarm system keypad.

## THE CD3008 KEYPAD

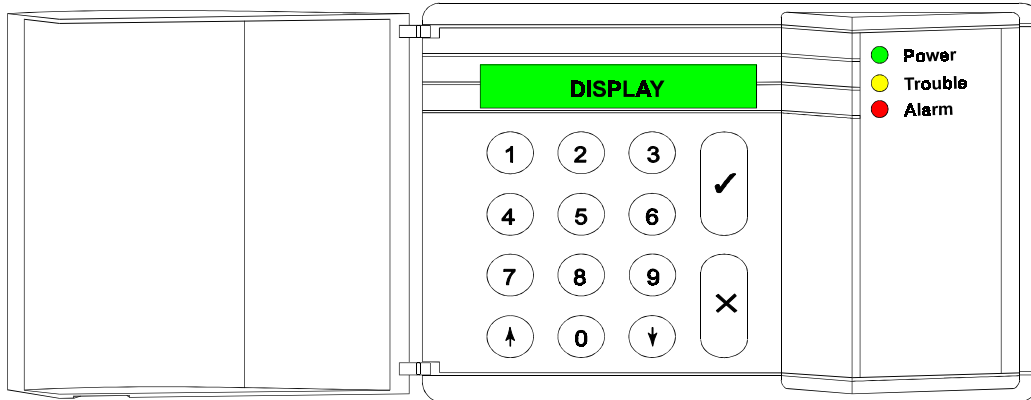

### The keys

- 0 - 9** These keys are used to enter your code. Always begin with zero (0) and then enter your code. After entering the code, you can carry out the operations assigned to it.
- The options assigned to a code can be adjusted by the installer or manager.
- ↑** When you are in an option list, this key can be used to go backwards in the list. During arming you can exclude zones. See **Special keys**.
- ↓** This key has several functions. When you are in an option list, you can use it to move forward through the list. The other options are listed under **Special keys**.
- ✓** This key is the **Accept** key. It is used to confirm that the option shown in the display should be implemented.
- X** This is the **Reject** key. It is used to indicate that the option shown has not been changed or that you want to exit the option list.

### Special keys

The following key combinations can be programmed by the installer. They may not be active in your system.

- ↑↓** Pressing these keys simultaneously will activate a personnel attack alarm. A report can then be sent over the phone lines to the central station, and the bells and flashing light may be activated.
- ↓↓<sup>1</sup>** Press the '↓' key twice to see which zones are still open. All the open zones are displayed or the message '**All Closed**' appears.
- ↑↑<sup>1</sup>** Press the '↑' key twice to see which zones are inhibited. All the inhibited zones are displayed or the message '**No Inhibits**' appears.

<sup>1</sup> If the system is split you must indicate which system you want information about. Systems which are armed or have been triggered cannot be selected.

---

## THE DISPLAY

---

The display is the link between you and the security system. The text messages displayed show where and when faults or alarms have occurred. The display can also show a list of operations from which you can select.

Examples of the messages which can appear include:

TUE 23 APR 07.40

The date and time are always displayed, regardless if the system is armed or not. You can ask the installer to replace it with another message, if you want.

Arm Menu

If you press Accept (✓), you enter an option list. This option list can be used to determine the method used arm the system.

Area 1 Arming

The system is being armed. Leave the secured area now.

Area 1 Armed

The system is armed.

Not all the messages may appear on your display: it depends how the system has been programmed. It can show you only the messages you want to see, or those you are authorised to see.

---

## THE LEDs

---

There are three coloured LEDs (light emitting diodes) on the keypad that let you quickly see if there is a problem.

<b>Green LED</b>	<i>Power</i>	The mains power is on. If it has not been illuminated for a hour and a power cut is not apparent, contact your installer.
<b>Yellow LED</b>	<i>Trouble</i>	<p>If the yellow LED is on, there is a problem in the panel. The type of problem is shown in the display. Contact your installer. Problems that may occur include:</p> <ul style="list-style-type: none"><li>◆ Battery fault</li><li>◆ Fuse fault</li><li>◆ Line fault (if a dialler is connected)</li><li>◆ RKP fault (problem with keypads)</li></ul> <p>EEPROM fault (problem in the system)</p>
<b>Red LED</b>	<i>Alarm</i>	<p>The alarm is activated. The bells, keypad buzzers and flashing light may also be active. If a dialler is connected, the alarm is reported to the central station. When you enter your code, the system disarms, the bells and the flashing light are switched off, and the central station receives the report that the alarm has been deactivated.</p> <p>The red LED will also illuminate if you disturb an alarm zone during the exit period, and the bells and dialler will be activated.</p>

# USING A SINGLE ALARM SYSTEM

This chapter explains how to switch on and off an alarm system for premises with only one alarm system. These instructions also apply to users who only have access to a single alarm system in the premises, although several systems may actually be present.

Depending on how the system has been programmed, you may not need to do all the steps shown in the instructions.

If you enter the wrong code 10 times consecutively, the system is automatically locked for 90 seconds. During this time you cannot access the system.

---

## ARMING A SYSTEM

---

Before you can arm, that is switch on, the alarm system, all intrusion zones must be secure. If a zone in the premises is 'open,' that is its doors, windows, etc. are not properly closed, you will not be able to set the alarm in that zone, and the message 'Open zones' will appear on the display. It will also show you which zone(s) are open. You must then check that the doors, windows, etc. protected by the zone(s) shown on the display are properly closed.

1. Go to the keypad. The current date and time appear on the display. An example is shown.
2. Press the key **0** and then enter your code. A '\*' appears in the display for every key you press. Use the **0** key to cancel an incorrect entry and to restart a new entry code.

TUE 23 APR 07.39

Enter Code



**0 + code**

Enter Code \*\*\*\*

Arm Menu

3. Press the **Accept** key.



Normal Set

4. Press the **Accept** key again.



Normal Set ↑

If the system cannot be armed because there are area(s) in the premises which are not properly secured, the message '**Open Zone(s)**' will appear and a list of the zone(s) not closed. Press the **0** key to quit and check the doors, windows, etc. of the zone(s) identified.

For information about excluding open zones, refer to the section 'Arming a system which has open zones' on page 8.

The alarm is being set.

System Arming

The buzzer begins to beep. You must now exit the protected area by the designated route.

Leave now



Beeeeep

The alarm is now set.

System Armed

The current date and time automatically appears.

TUE 23 APR 07.40

## ARMING A SYSTEM WITH OPEN ZONES

When arming (switching on) the system, you may get the message 'Open Zone(s)' along with a list of the zones in the premises that have not yet been closed. You should close these zones and then retry arming the system. However, occasionally you may not be able to close an open zone because, for example, a door lock or magnetic contact may be malfunctioning. You can exclude this open zone from the system (called inhibiting a zone).

Only use this exclusion option when absolutely necessary as any inhibiting of zones will reduce the security level of your system.

Although you can exclude an open zone when the tamper alarm has been triggered (identified by the letter 'T' in front of the open zone listed), you will not be able to arm the system until the tamper alarm has been rectified.

1. Go to the keypad. The current date and time appear on the display. An example is shown.
2. Press the key **0** and then enter your code. A '\*' appears in the display for every key you press. Use the **0** key to cancel an incorrect entry and to restart a new entry code.

TUE 23 APR 08.21

Enter Code



**0 + code**

Enter Code \*\*\*\*

Arm Menu

3. Press the **Accept** key.



Normal Set

4. Press the **Accept** key again.



Normal Set ↑

System Arming

Open Zone(s)

The system has identified zones in the premises that are not properly closed.

It then proceeds to list the open zone(s). In this example, zone 2 'Hall' is open.

002 Hall

5. Press **↑** to exclude a zone from the system.



Inhibit Zone \_\_\_\_



- Press the number of the open zone, in this example '2.'



The system then confirms which zone you have excluded.

If another zone is open, it will be listed and you must again press **↑** and the zone number to inhibit it.

The alarm is being set.

The buzzer begins to beep. You must now exit the protected area by the designated exit route.

The alarm is now set.

The current date and time will automatically appear.

Inhibit Zone 2

002 Hall

Is Inhibited

System Arming

Leave now



Beeeeep

System Armed

TUE 23 APR 08.22

## DISARMING A SYSTEM

If you enter the premises when the system is armed, the buzzer will begin to beep (if programmed) with an intermittent tone to indicate that the entry period has begun. As long as this beeping continues, you can disarm (switch off) the system with your code without activating an alarm. You must not enter other areas of the system during the beeping. If you do, a siren will sound and a full alarm condition may occur. The entry period (length of time of the beeping) is programmed by the installer.

- Go to the keypad. The entry period starts as soon as you open the entrance door, or when you enter the entry zone. You can switch off the system without activating the alarm as long as the beeping continues.

The current day, date and time are displayed. An example is shown.

- Press the key **0** and then enter your code. A '\*' appears in the display for every key you press. Use the **0** key to cancel an incorrect entry and to restart a new entry code.



Beep Beep

TUE 23 APR 07.39

Enter Code



**0 + code**

Enter Code \*\*\*\*

Disarm?

- Press the **Accept** key.



Finished?

- Press the **Accept** key to confirm that you have finished. Steps 3 and 4 may be automated by the system. If so, you will not have to press the **Accept** key.



TUE 23 APR 07.40

---

---

## DISARMING A SYSTEM AFTER AN ALARM

---

---

The bell and the flashing light are activated when an alarm is triggered in the system. If your system has the option, a report of the event is automatically sent over the phone lines to a central station. If you inadvertently activate an alarm, immediately telephone the central station to prevent an unnecessary response.

When you enter the premises after an alarm, the bell may already be silent if it has been so programmed. This allows there to be several alarms. Remember to record the fault or alarm in your logbook for future reference.

1. Go to the keypad. The entry period starts as soon as you open the entrance door, or when you enter the entry zone. You can switch off the system without activating the alarm as long as the beeping continues.

The red **ALARM** LED is lit on the control panel.

 
The current day, date and time are displayed. An example is shown.

2. Press the key **0** and then enter your code. A '\*' appears in the display for every key you press. Use the **0** key to cancel an incorrect entry and to restart a new entry code.



TUE 23 APR 07.39

Enter Code




Enter Code \*\*\*\*

Disarm?

3. Press the **Accept** key.

A list of triggered zones will be displayed.

 In this example, the alarm was triggered in zone 4 'Back Door' on 23 April at 5.20 am in area 1.




Events in Log...

004 Alarm

004 Back Door

23 APR 05.20 A1

 4. Press the **Accept** key to confirm the alarm.



System Disarmed

TUE 23 APR 07.40

Step 3 above may be automated by the system. If so, you will not have to press the **Accept** key.

**RECORD THE FAULT OR ALARM IN YOUR LOGBOOK !**

# USING A SPLIT SYSTEM

When the system was installed it was divided into different security areas. A system that has more than one security area it is called a split system. These different areas were programmed by the installer. Depending on how the system was programmed, your code may give you access to one or more of the security areas.

Depending on how the system has been programmed, you may not need to do all the steps shown in the instructions.

If you enter the wrong code 10 times consecutively, the system is automatically locked for 90 seconds. During this time you cannot access the system.

A split system has two different standby displays. This is the display you see when you approach the keypad. They are called 'Time/Date display' and 'Status display.' The installer programmes one of these versions in your system.

## **Time/Date display:**

It shows the current day, date and time. The system can also be programmed to present a second display to show a message, such as your company name for example.

TUE 23 APR 07.40

## **Status display:**

It shows all the areas in the system (up to eight) and their security status. There are five different labels to identify the status of an area. If there are more than four areas, they will be shown in a second display.

[1] =2= <3> 4

- [1] square brackets. The area is armed.
- [1] (number flashing). Area number displayed is in alarm.
- =2= equal signs. The area is being armed (the exit time is still operating).
- <3> pointed brackets. The area is partially armed (partguard).
- 4 no brackets. The area is disarmed.

After entering your code, you will see one of two 'selection' messages. Which message you get depends on which one the installer programmed. They are as follows:

1. The system lists the status of each area, one display per area. At the end of the list you can enter the area number you want to access. If you do not enter a number, the standby display will reappear.

Area 1 Armed

Area 2 Disarmed

Enter Area No.

OR

2. The system lists the status of all the disarmed areas (underscore scrolls underneath the numbers). If there are more than four areas, they will be shown in a second display. You can then enter the area number you want to access. If you do not enter a number, the standby display will reappear.

[1] 2 <3> 4

Enter Area No.

---

---

## ARMING A SPLIT SYSTEM

---

 
As explained at the beginning of the chapter “Using a split system,” a split system can be programmed to show two different standby message displays, and two different ‘selection’ messages after entering your code. The instructions below use the displays “Time/Date” and “Area [number] armed.”

If your code lets you access more than one security area, you can select one of them to arm.

1. Go to the keypad. The current date and time are displayed. An example is shown.
2. Press the key **0** and then enter your code. A ‘\*’ appears in the display for every key you press. Use the **0** key to cancel an incorrect entry and to restart a new entry of the code.

TUE 23 APR 07.40

Enter Code



Enter Code \*\*\*\*

In this example, areas 1 and 2 are disarmed.

Area 1 Disarmed

Area 2 Disarmed

You have a few seconds to enter the number of the area you want to arm.

 
Enter Area No.

3. Enter the area number (in this example it is 1).




Arm Menu

4. Press the **Accept** key.



Normal Set

 5. Press the **Accept** key again.



If you want to exclude zones in the area (open zones), press the arrow key (↑). This feature is explained in the section “Arming a system which has open zones.” Otherwise do nothing: the message ‘Area 1 Arming’ appears automatically.

Normal Set ↑

Area 1 is arming. If programmed, the buzzer for the system will begin.

Area 1 Arming



Leave Now

Area 1 Armed

Area 2 Disarmed

 
Enter Area No.

6. If you also want to arm area 2, enter the number 2 into the keypad.




Arm Menu

- Press the **Accept** key again.



Normal Set

 

Normal Set ↑

Area 2 is arming. If programmed, the buzzer for the area will begin.

Area 2 Arming



You must exit the protected area by the designated exit route.

Leave Now

Area 1 Armed

Both areas are now armed.

Area 2 Armed

Enter Area No.

TUE 23 APR 07.41

---

## ARMING A SPLIT SYSTEM WITH OPEN ZONES

---

When arming (switching on) the alarm, you may get the message **'Open Zone(s)'** along with a list of the zones in the premises which have not yet been closed. You should close these zones and then retry arming the alarm. However, occasionally you may not be able to close an open zone because, for example, a door lock or magnetic contact may be malfunctioning. You can then exclude this open zone from the system (called inhibiting a zone). A split system lets you control open zones in specific areas of the premises.

Only use this exclusion option when absolutely necessary as any inhibiting of zones will reduce the security level of your system.

Although you can exclude an open zone when the tamper alarm has been triggered (identified by the letter 'T' in front of the open zone listed), you will not be able to arm the system until the tamper alarm has been rectified.

As explained in section "Arming a split system," a split system can be programmed to have two different standby message displays, that is the message you see when you approach the keypad, and two different messages immediately after entering your code into the keypad. The instructions below use the displays "Time/Date" and "Area [number] armed."

If your code lets you access more than one security area, you can select one of them to arm.

- Go to the keypad. The current day, date and time are displayed. An example is shown.
- Press the key **0** and then enter your code. A **\*\*** appears in the display for every key you press. Use the **0** key to cancel an incorrect entry and to restart a new entry of the code.

TUE 23 APR 08.21

Enter Code

In this example, areas 1 and 2 are disarmed.

You have a few seconds to enter the number of the area you want to arm.

3. Enter the area number (in this example it is 1).

4. Press the **Accept** key.

5. Press the **Accept** key again.

The system has identified zones in the area that are not properly closed.

It then proceeds to list the open zone(s). In this example, zone 2 is open. The display is blinking.

6. Press **↑** to exclude a zone from the area.

7. Press the number of the open zone, in this example '2.'

The system then confirms which zone you have excluded.

 
If there still is a zone open, it will be listed, and you must again press **↑** and the zone number to inhibit it.

The alarm is being set.

8. The buzzer begins to beep. You must now quit the secured area.

You must now exit the protected area by the designated exit route.

The alarm is now set.



Enter Code \*\*\*\*

 
Area 1 Disarmed

Area 2 disarmed


Enter Area No.



Arm Menu



Normal Set

 

Normal Set ↑

Open Zone(s)

002 Hall



Inhibit Zone \_\_\_\_



Inhibit Zone 2

002 Hall

Is Inhibited

Area 1 Arming



Leave now

Area 1 Armed

Area 2 Disarmed


Enter Area No.

TUE 23 APR 08.22

## DISARMING A SPLIT SYSTEM

 If you enter the premises when the system is armed, the buzzer will begin to beep (if programmed) with an intermittent tone to indicate that the entry period has begun. As long as this beeping continues, you can disarm (switch off) the system with your code without activating an alarm. You also must not enter other areas of the system during the beeping. If you do, a siren will sound and a full alarm condition may occur. The entry period (length of time of the beeping) is programmed by the installer.

- Go to the keypad. The entry period starts as soon as you open the entrance door, or when you enter the entry zone. You can switch off the system without activating the alarm as long as the beeping continues.




The current day, date and time are displayed. An example is shown.

TUE 23 APR 07.39

- Press the key **0** and then enter your code. A **\*\*** appears in the display for every key you press. Use the **0** key to cancel an incorrect entry and to restart a new entry of the code.

 Enter Code



In this example, area 1 is armed and area 2 disarmed.

Enter Code \*\*\*\*

You have a few seconds to enter the number of the area you want to switch off.

Area 1 Armed

Area 2 Disarmed

 
- Enter the area number (in this example it is 1).

Enter Area No.



- Press the **Accept** key to confirm you want to switch off area 1.

Disarm?



Area 1 Disarmed

- Press the **Accept** key to confirm you have finished.

Finished?



Area 1 Disarmed

Area 2 Disarmed

- If you want to disarm or modify another area, enter its number.

Enter Area No.

If you are finished, do nothing. The standby display message will automatically appear after a few seconds.

Steps 4 and 5 may be automated by the system. If so, you will not have to press the **Accept** key.

TUE 23 APR 07.40

---

---

## DISARMING A SPLIT SYSTEM AFTER AN ALARM

---

The bells and the flashing light are activated when an alarm is triggered in the system. If your system has the option, a report of the event is automatically sent over the phone lines to a central station. If you inadvertently activate an alarm, immediately telephone the central station to prevent an unnecessary response.

When you enter the premises after an alarm, the bell may already be silent if it has been so programmed, but the red LED will still be activated. This allows there to be several alarms. Remember to record the fault or alarm in your logbook for future reference.

If your code allows you to access more than one security area, you can select one of them to disarm.

1. Go to the keypad. The entry period starts as soon as you open the entrance door, or when you enter the entry zone. You can switch off the system without activating the alarm as long as the beeping continues.

The red LED **ALARM** is lit on the keypad.

The standby display is displayed. An example is shown.

2. Press the key **0** and then enter your code. A '\*' appears in the display for every key you press. Use the **0** key to cancel an incorrect entry and to restart a new entry of the code.

In this example, the area 1 alarm has been triggered and area 2 is armed.

3. Enter the area number where the alarm occurred (in this example it is 1). You have a few seconds to enter the number.

4. Press the **Accept** key to disarm the selected area (area 1 in this example).

A list of where the alarm was triggered is presented.

In this example, the alarm was triggered in zone 4 'Back Door' on 23 April at 7.40am in area 1.

5. Press the **Accept** key to confirm the alarm.



Beep Beep

TUE 23 APR 07.39

Enter Code



0 + code

Enter Code \*\*\*\*

Area 1 Alarm

Area 2 Armed

Enter Area No.



1

Disarm?



Events in Log...

004 Alarm

004 Back Door

23 APR 05.20 A1



Area 1 Disarmed



If there are other alarms, they are shown one after another.

A summary of the status of the areas appears. If you wish to make more changes, enter the number of the area you want to change. Otherwise the standby message automatically appears.

Area 2 Armed

Enter Area No.

TUE 23 APR 07.40

**RECORD THE FAULT OR ALARM IN YOUR LOGBOOK !**

---

# UPLOADING AND DOWNLOADING IN THE CD72 AND THE CD95

The CD72 and CD95 series has the option of controlling, modifying and programming the alarm system remotely by the installer. With the use of a modem messages can be sent from the control panel to a personal computer (PC), called uploading, and from a PC to the control panel, called down loading. Uploading and downloading is therefore a quick and handy aid to easily discovering and solving problems.

A connection can be established in the following ways:

- 1 . By dialling into the alarm system. The installer dials in to your alarm system. The dialler will then accept and check whether the connection can be established. The dialler then calls the installer back. This ensures that nobody other than the installer can gain access. When the connection has been established '**OK**' appears in the display.
2. By entering a up/down (U/D) load code. This is a code which you can enter when the display is showing the time and date. If the code is correct, '**OK**' appears in the display and the dialler then calls your installer and establishes a connection.

When the connection has been established '**U/D code**' appears in your display. You can no longer control your system from that moment until the time and date reappear in the display.

# OVERVIEW OF THE OPTIONS AVAILABLE

The following flowchart provides an overview of all the options available from the CD72 and CD95/150 alarm systems. It also shows the keypad keys you need to press in order to arrive at the options. Options listed below in grey are only available for the CD95/150 alarm system. The symbols used to represent the keys are as follows:

✓ Accept      X Reject      ↓ Move forward      ↑ Move backward

---

## OPTION LIST FOR THE CD72/95/150

---

There are nine main menu options in this system. Depending on how the system has been programmed, your code may not give you access to all of the options. If you want to access more options than you currently are able to, contact your installer.

The menu options let you carry out the following operations:

Name of menu option	What it lets you do
1. Arm Menu	There are four sub-options, each allowing you to carry out a different operation: <ul style="list-style-type: none"><li>• Normal Set      Set the alarm</li><li>• Partguard      Set the alarm with zones excluded by the installer</li><li>• Set (No Buzzer)      Set the alarm with no exit time</li><li>• Forced Arm inhibited,      Set the alarm with all open zones except exit/entry zone(s) and access zone(s)</li></ul>
2. Inhibit	Exclude open zones from a security area
3. Walk/Bell/Ch Test	Test if detectors, internal/external bells are OK/ switch chime on or off
4. Light Menu	Turn on external/internal lights
5. Unlock	Unlock a door
6. E. Log/Time/Date	Engineers log, listing all events in the system, print log, and changing the standby date and time
7. Change Codes	Change own code(s) (if programmed other codes and user names)
8. Operator Log	Detailed list of activation and system operations. This log will be cleared each time the system is armed
9. Finished?	Exit to time and date display

## Flowchart of the CD72/95/150 User Options

